



5. Correction of weight error

when the weight value is **lower** than the real weight

1. Put a weight or an object of which weight you've already known. (ex. 10kg)
2. Push for 3 seconds the setting button by using a pin.

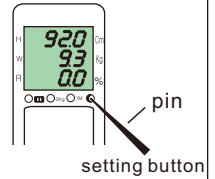


3. Put the touch bar to the right end, and move it slowly to the left until right value shown.

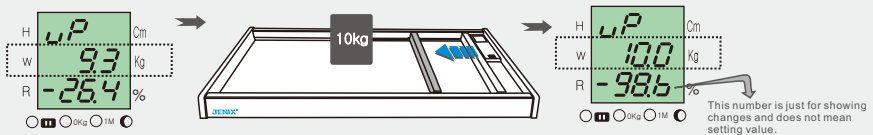


4. Push the setting button for 3 seconds to finish correction.

when the weight value is **higher** than the real weight

1. Put a weight or an object of which weight you've already known. (ex. 10kg)
2. Push for 3 seconds the setting button by using a pin.
3. Push the setting button one more time to change from "up" to "down (dn)".

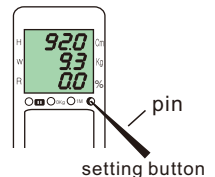

4. Put the touch bar to the right end, and move it slowly to the left until right value shown.

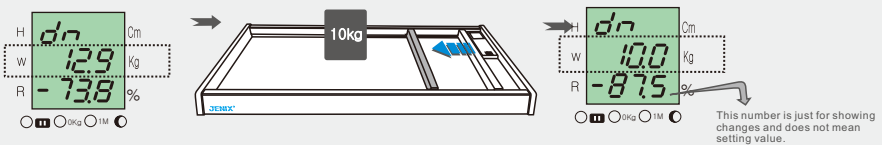

5. Push the setting button for 3 seconds to finish correction.