
 
Weight Value Correction

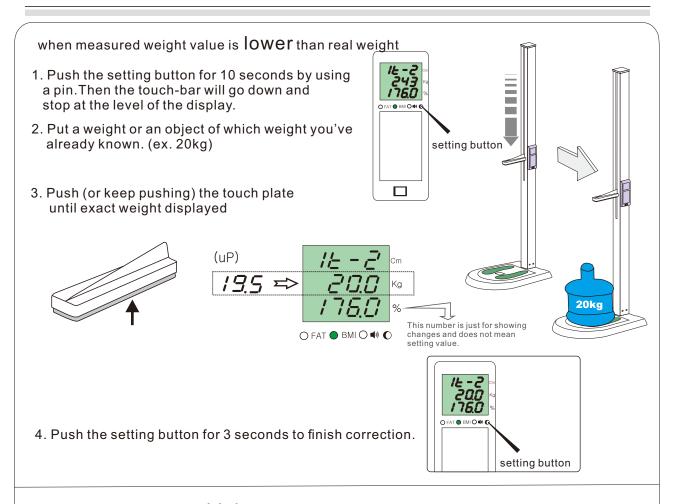

when measured weight is higher than real weight

- 1. Push the setting button for 10 seconds.
- 2. Put a weight or an object of which weight you've already known. (ex. 20kg)
- 3. Push the setting button one more time to select "DOWN" from "UP"



- 4. Push (or keep pushing) the touch plate until exact weight displayed
- 5. Push the setting button for 3 seconds to finish correction.

